


Assembly Instructions for blanking flange type

Assembly Instructions
AI 345
Issue K - 05/06

470 EExd I

Certificate No. Baseefa 02 ATEX 0174U  IM 2 IP66

HAWKE
International

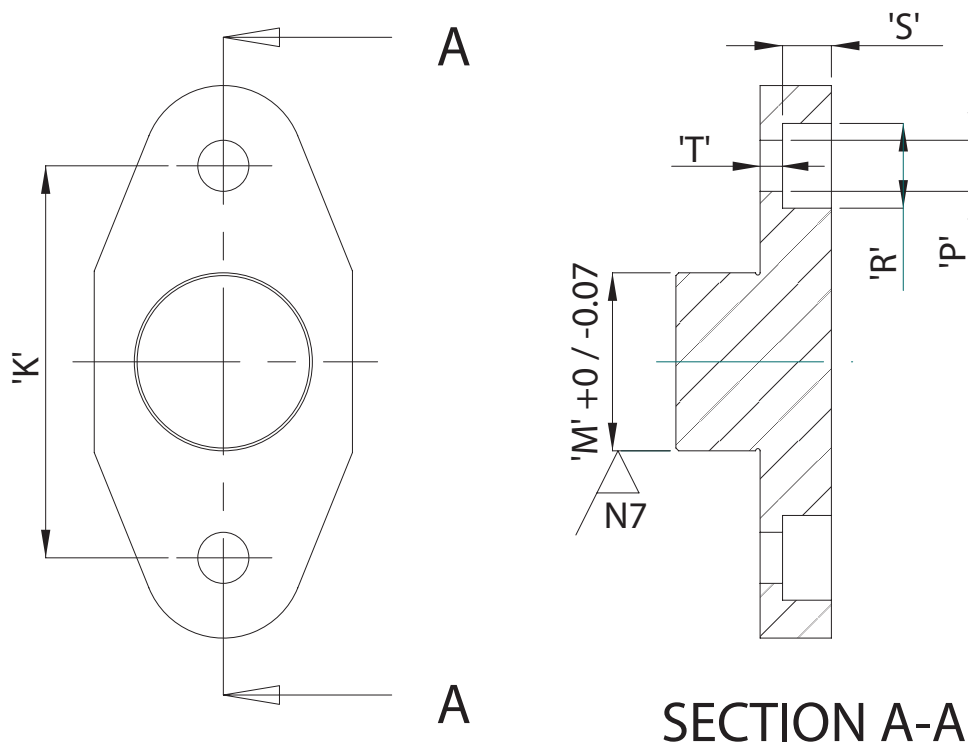

This is a component certified blanking flange, ensure that apparatus certificate lists this component as acceptable.

FLANGE ADAPTOR DIMENSIONS							
	K	M	P	R	S	T	Fixing Screws
O	44.45	19.05	6.7	11.1	7.0	4.1	M6
A	44.45	19.05	6.7	11.1	7.0	4.1	M6
B	57.15	25.40	6.7	11.1	7.0	4.1	M6
C	69.85	31.75	9.1	15.1	8.7	4.0	M8
C2	82.55	38.10	9.1	15.1	8.7	4.0	M8
D	95.25	50.80	11.1	18.1	10.5	3.8	M10
E	114.30	63.50	11.1	18.1	10.5	3.8	M10
F	127.00	76.20	11.1	20.5	13.5	4.0	M10

EQUIPMENT ENTRY HOLE SIZE		
	MAX	MIN
O	19.35	19.10
A	19.35	19.10
B	25.70	25.45
C	32.05	31.80
C2	38.40	38.15
D	51.10	50.85
E	63.80	63.55
F	76.50	76.25

Step 1 (Prior to Installation)

Ensure the holes in the equipment are compatible with the blanking flange. Details of equipment entry hole sizes and relevant dimensions of the flange are shown in the tables.

Step 2

Push the flange into the equipment entry hole and secure the flange to the enclosure using 2 socket cap head screws of the correct thread size. The length of the thread must be selected such that the screws do not bottom in the fixing holes.

Smarter products

Hawke International is a division of Hubbell Limited
A member of the Hubbell Group of Companies.



AI 345 - Issue K / Page 1 of 2

HAWKE
International

Visit our Web Site at www.ehawke.com